



DESIGN PH	DRAWN BY PH	DART AEROSPACE USA, INC. PORT HADLOCK, WA	
CHECKED 	APPROVED 	DRAWING NO. DSI 9364	REV. A SHEET 1 OF 1
DATE 07.01.16		TITLE BUSHING INSTALLATION	SCALE NTS
A	07.01.16	NEW ISSUE	

DART SERVICE INSTRUCTION

TO AMEND IIN-D412-742 REV. B AND ICA-D412-742 REV. 1

REF. FAA STC: SR01583SE



REF. CANADIAN STC: SH05-37 ISSUE 1

TO PREVENT THE D3391-011/-021 FWD TUBE FROM MOVING WITH RESPECT TO THE D3391-013/-023 MID TUBE, CUSTOMERS RECEIVING D412-742-011/-013 SKIDTUBES AT CHG 002 HAVE A D3591-1 BUSHING INSTALLED AT THE FWD SADDLE HOLES AS SHOWN IN DETAIL A (2 PLACES).

CUSTOMERS WITH D412-742-011/-013 SKIDTUBES AT CHG 001 CAN PROCURE THE DSI 9364-011 KIT AND INSTALL THE D3591-1 BUSHINGS AS FOLLOWS:

- 1) REMOVE SKIDTUBE/SADDLES FROM AIRCRAFT USING SECTION 32.7 OF ICA-D412-742 AS A GUIDELINE.
- 2) TRANSFER DRILL 1/2" HOLES ($\varnothing 0.500$) INTO THE FWD SADDLE HOLES AT THE LOCATIONS SHOWN (2 PLACES) THRU THE D3391-013/-023 MID TUBE AND D3391-011/-021 FWD TUBE. **DO NOT OPEN UP HOLES IN D2571/D2572 FWD SADDLES.**
- 3) REMOVE FWD TUBE FROM MID TUBE, DEBURR DRILLED HOLES, TOUCH UP HOLES WITH MIL-P-85582 OR MIL-P-23377 PRIMER
- 4) RE-INSTALL D3391-011/-021 FWD TUBE INTO D3391-013/-023 MID TUBE USING SECTION 32.7 OF ICA-D412-742 AS A GUIDELINE EXCEPT INSTALL D3591-1 BUSHINGS AS SHOWN IN DETAIL A USING LPS LABORATORIES LPS-3 CORROSION INHIBITOR PRIOR TO INSTALLING THE D2571/D2572 SADDLES.


QTY -011	PART NUMBER	DESCRIPTION
X	DSI 9364-011	BUSHING INSTALLATION
2	D3591-1	BUSHING

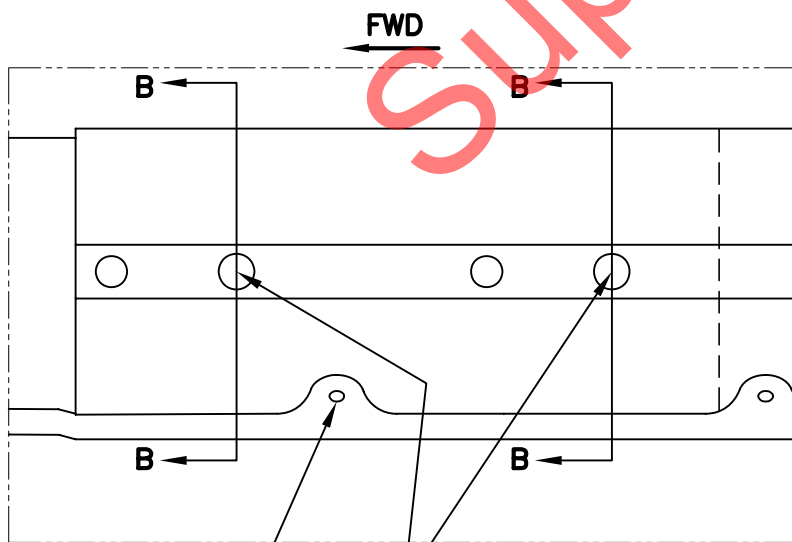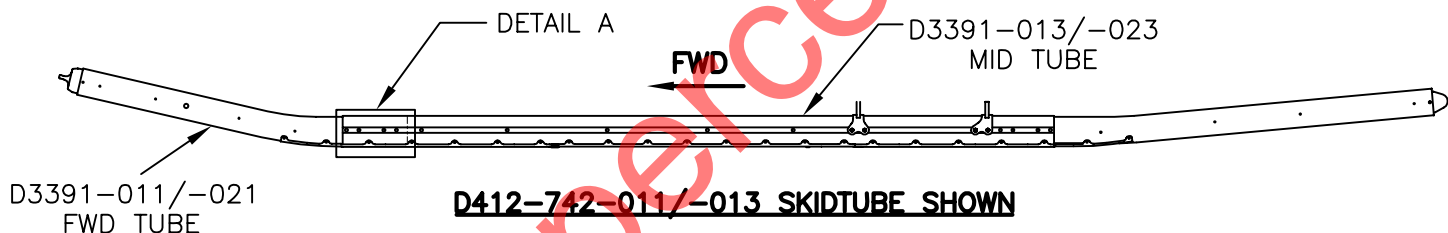

ENSURE BOLT IS FASTENED
PRIOR TO TRANSFER DRILLING
(REF)

OPEN TO $\varnothing 0.500$ AND INSTALL
D3591-1 BUSHING
(2 PLACES)

DETAIL A: D3591-1 BUSHING INSTALLATION LOCATION

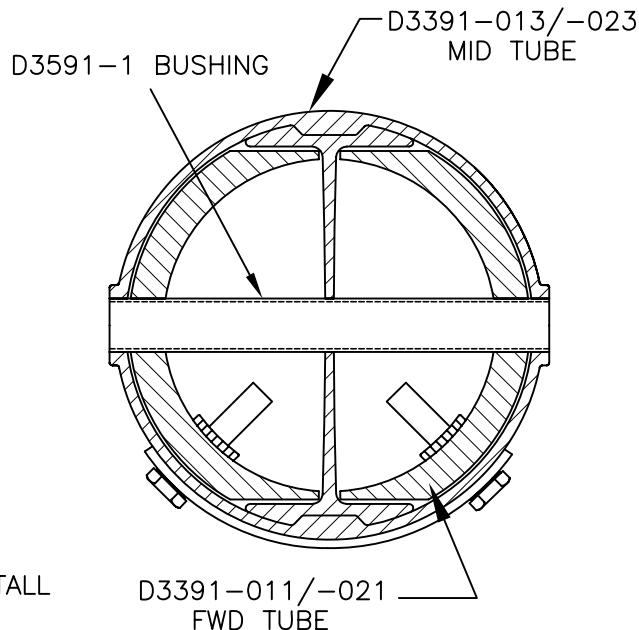

SECTION B-B

Copyright © 2007 by DART AEROSPACE USA, INC.

THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.